

# Garage Door Opening Preparation

AMERICAN DOOR COMPANY  
835 COMMERCE STREET  
REDDING, CALIFORNIA 96002

PH (530) 224-1640 FAX (530) 224-1560  
WWW.AMERICANDOORCO.NET  
INFO@AMERICANDOORCO.NET


W = NET WIDTH OF DOOR  
H = NET HEIGHT OF DOOR

## HEADROOM REQUIREMENTS:

- STANDARD TRACK / NO OPENER H = 12"
- STANDARD TRACK / CHAIN DRIVE H = 14"
- STANDARD TRACK / SCREW DRIVE H = 15"
- LOW HEADROOM TRACK / NO OPENER H = 6 1/2"
- LOW HEADROOM TRACK / CHAIN DRIVE H = 8"
- LOW HEADROOM TRACK / SCREW DRIVE H = 9"

### NOTE:

ALL SURFACES SHOWN BELOW SHOULD BE FLUSH. IF SHEETROCK IS TO BE USED, JAMBS SHOULD EXTEND INTO GARAGE THE SAME THICKNESS AS THE THICKNESS OF SHEETROCK. IF YOU ARE NOT USING SHEETROCKING, JAMBS SHOULD BE RIPPED FLUSH WITH STUDS.

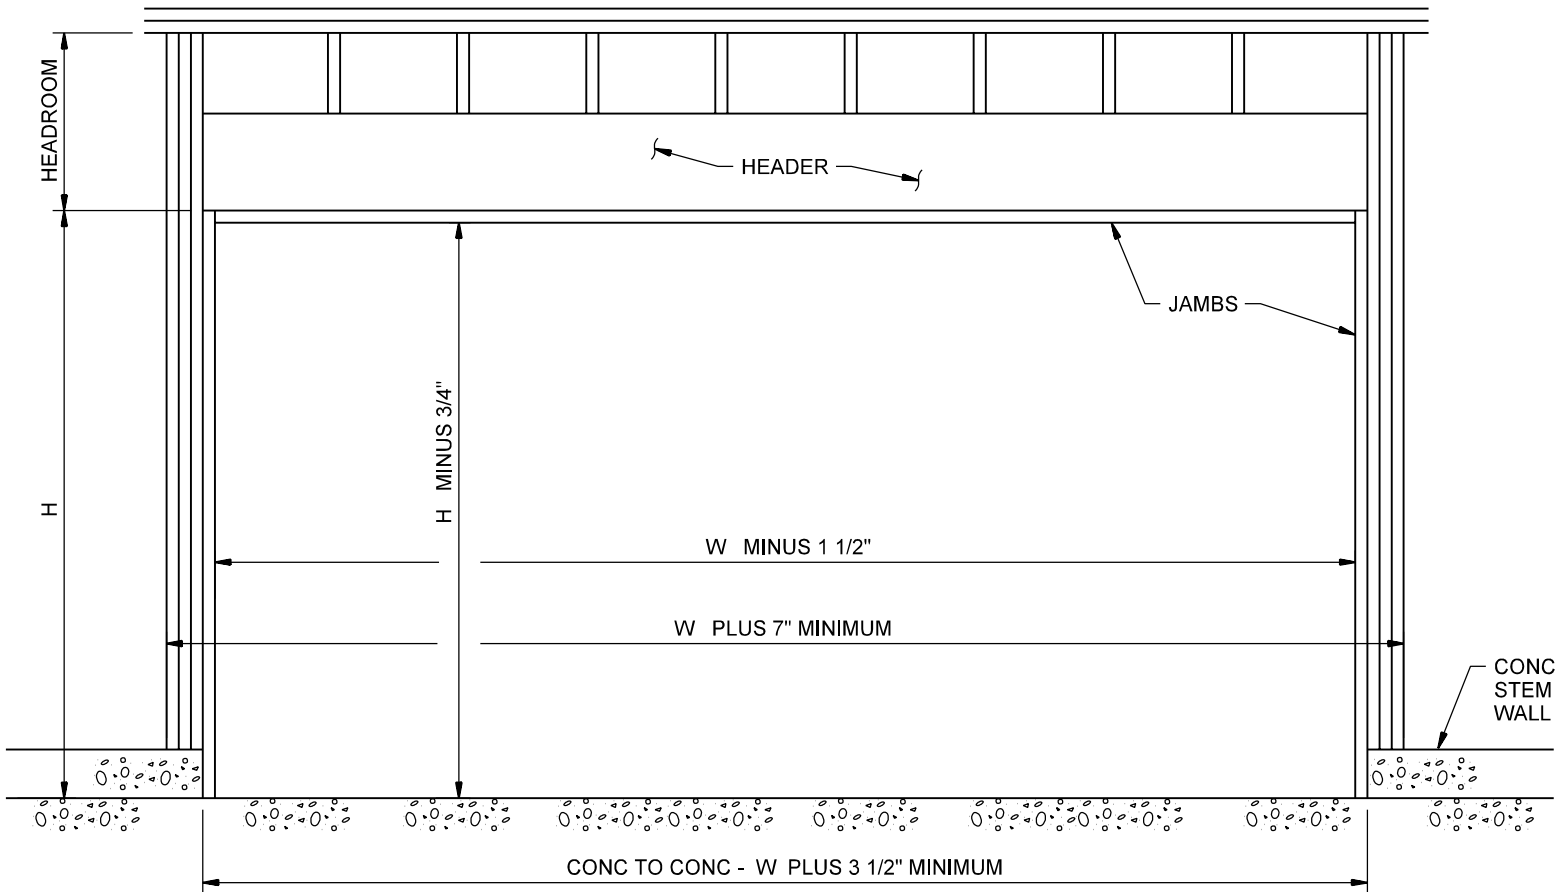

THIS DOCUMENT IS FOR INFORMATIONAL PURPOSES ONLY.  
ALL GARAGE DOOR PREPARATION SHOULD CONFORM TO LOCAL BUILDING CODES AND IS THE RESPONSIBILITY OF THE OWNER/CONTRACTOR.  
AMERICAN DOOR COMPANY IS NOT RESPONSIBLE FOR LOSS DUE TO  
IMPROPER GARAGE DOOR OPENING PREPARATION.